



Disconnect JP4 before programming!
 JP5: SPST
 JP2, JP3, JP7: Pushbutton
 IC1 set to 4.8 MHz, pre-scale :1.
 Battery: 1=GND, 2=+9V
 Place C1 near IC1.

YA-B02.02
schiesstakt
11 Mar 2010 23:29:42
Sheet: 1/1